





# VICTORIAN ROOF ASSEMBLY INSTRUCTIONS

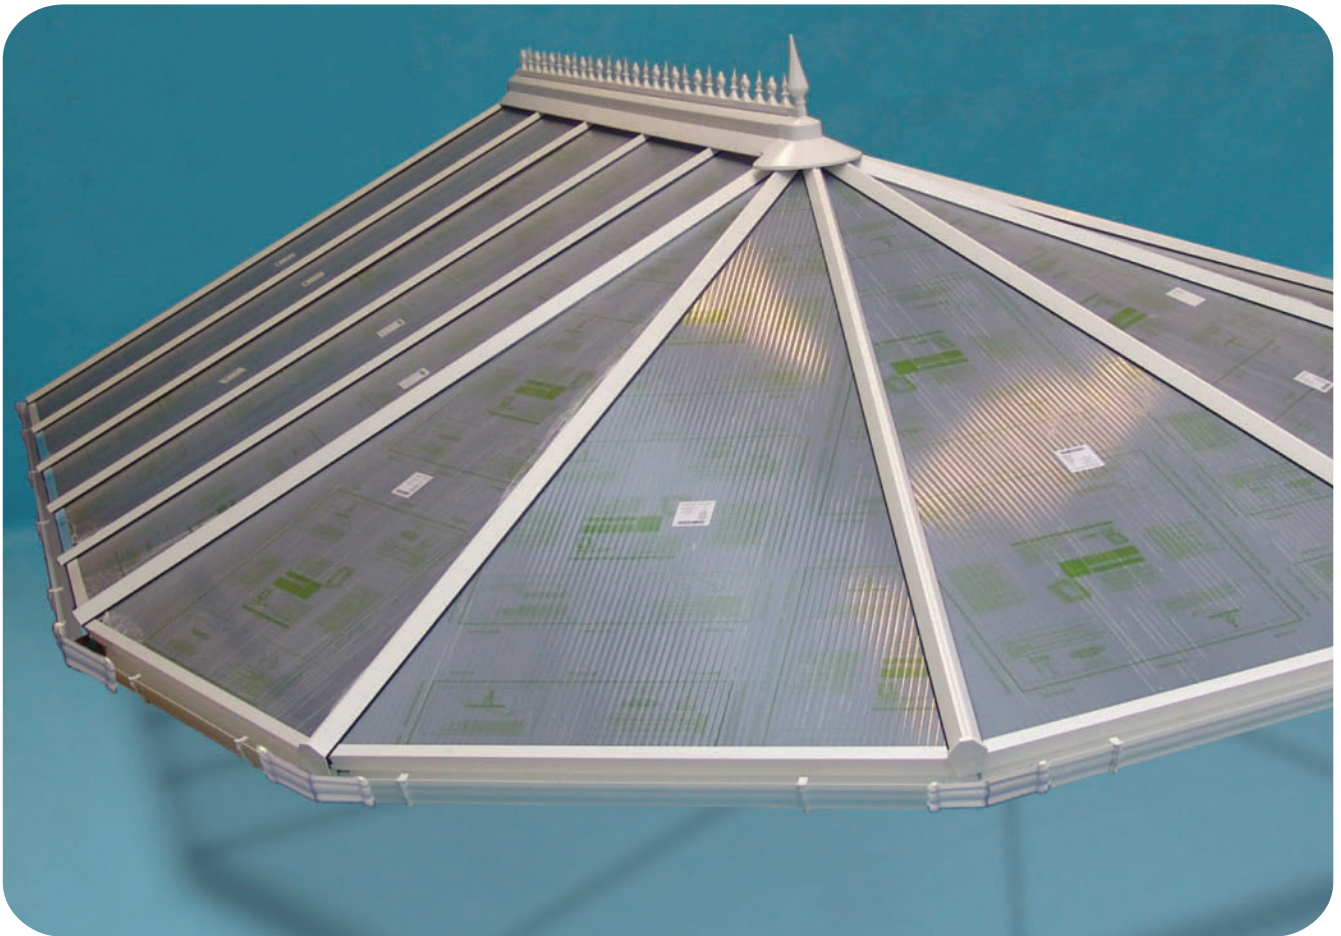

**SIMPLER  
BETTER  
FASTER**

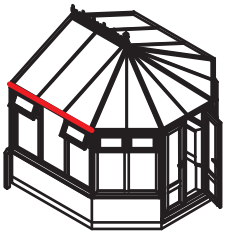

## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS



### 1. FITTING RING BEAMS



Always work anti-clockwise viewed from outside the roof.  
Each bar should be sequentially numbered, i.e. 1, 2, 3.  
Select the ring beam, position the left hand side of the ring beam on to the window frames below.  
Silicone seal contact area between the ring beams and the window frames below.


### DETAILS



Remove protective film from all components prior to fitting.



Ensure that window frames are level and plumb

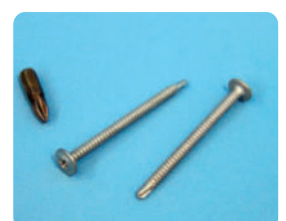

Use long screws when joining eaves to frames.



## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS



### 2. JOINING RING BEAMS




Fix the angled corner jointing plates to BOTH inside and outside corners of the ring beam using the short wide self drilling screws provided.

Once aligned, fix up through to window frames into the ring beam with the long thin self drilling screws provided.

Once the ring beams are fitted to the frames, recheck the frames are plumb and level, then securely fit to the dwarf wall / base using the frame fixers provided.


### DETAILS

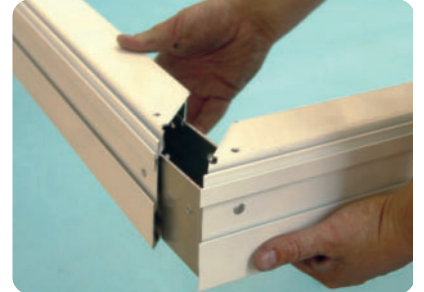


Use short wide screws to join ring beams.



Ensure that ring beams are level and plumb

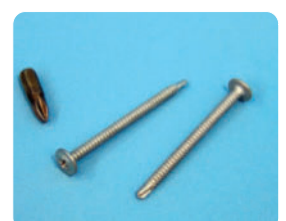

Use long screws when joining ring beams to frames.

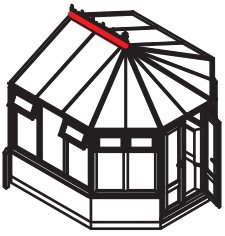

## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS



### 3. RIDGE



Support the ridge with a suitable prop, ensuring that the ridge is level.

The height of the ridge will be determined by the transoms when they are fixed to both ridge and ring beam.


### DETAILS



Make sure that the ring beams are square by measuring the diagonals.



Ensure that ridge is set level and plumb

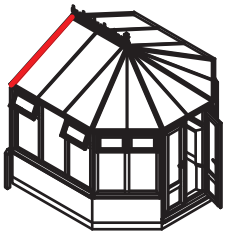

## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS




### 4. WALL BARS



Select the wall bars then using the locating pins position bars into ring beams and align tops with pre drilled holes to ridge.

Now fix wall bars at top and bottom using the short wide screws provided.

### DETAILS

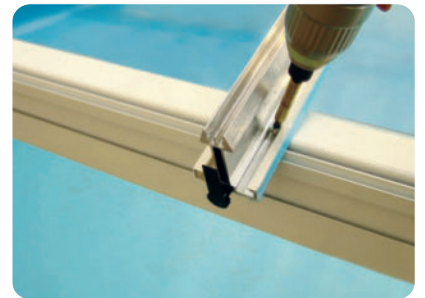


Use the short wide screws  
to fix rafters.



## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS




### 5. SIDE TRANSOMS

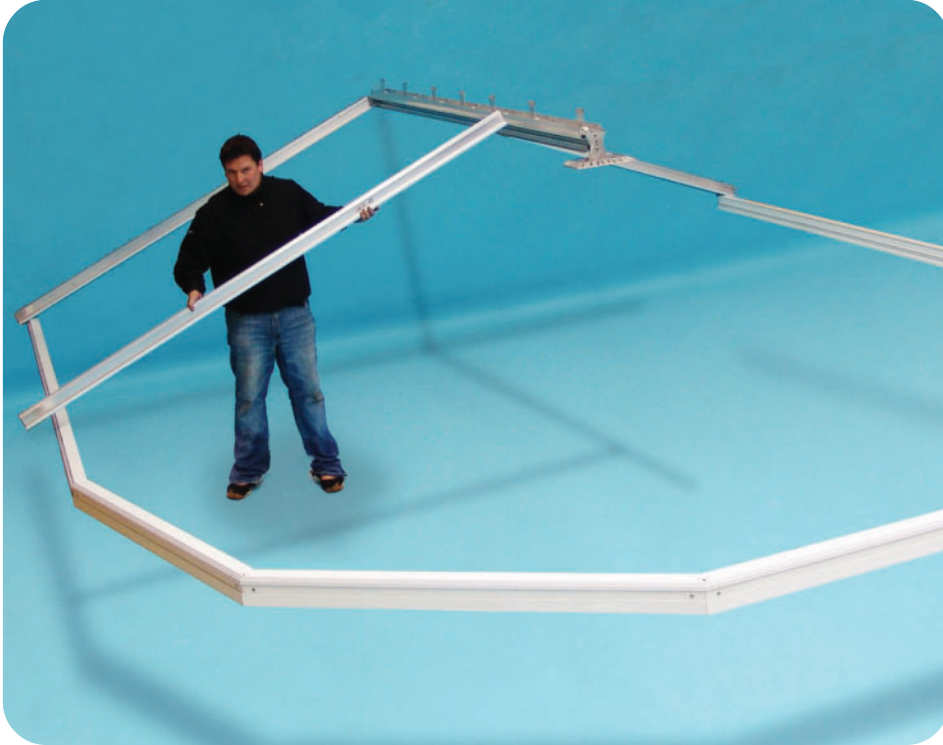


Now working left to right viewed from outside, fit all the side transoms. Locate the pin of each transom into the ring beam, then aligning the holes at the top with those pre-drilled on the ridge. Now fix at the top and the bottom using the short wide self tapping screws provided. Repeat process until all the transoms along each side of the roof are in position.

### DETAILS

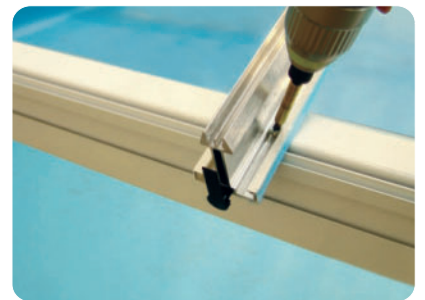


Use the short wide screws  
to fix rafters.

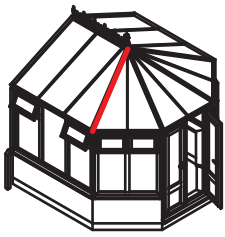

## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS





### 6. VICTORIAN BAR

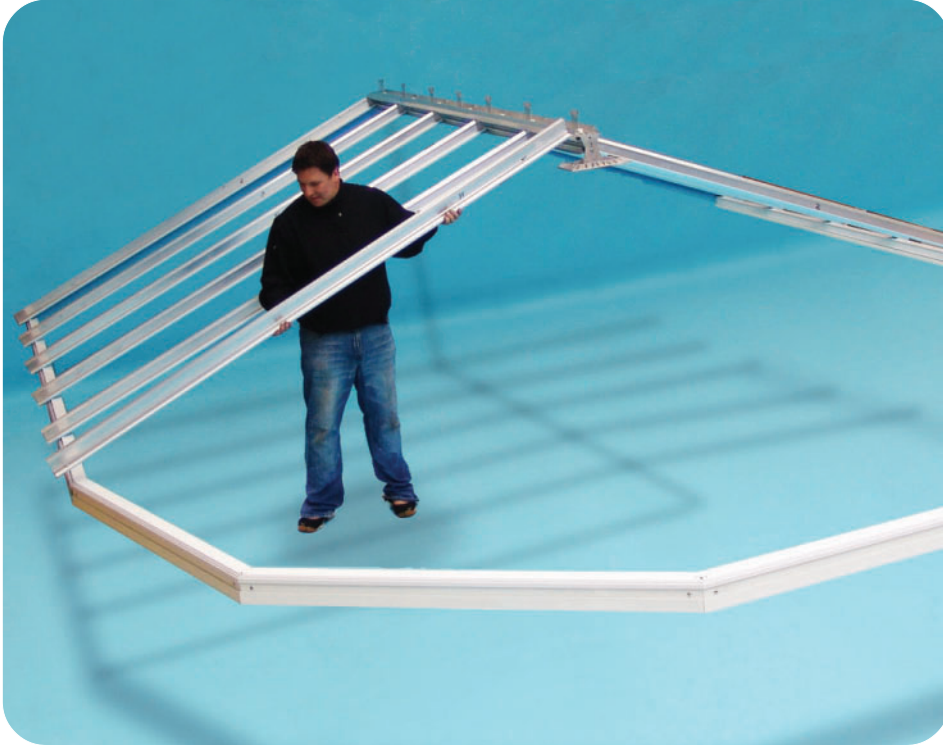

Fit the Victorian bars using the same method as the transoms. The Victorian bars should line through with the boss. Fix the Victorian bars through the slots on the boss and to the ring beam in the same process as the transoms. One of the benefits of the Aztec system is that the flashing can be done before the roof is glazed. First fit the ridge flashing trim, then the lead flashing can be cut and dressed down into the ridge trim and wall bar channel. Seal any flashing with a lead sheet sealant.

### DETAILS

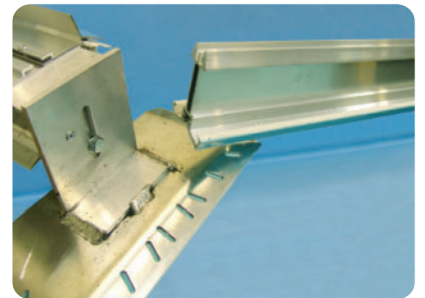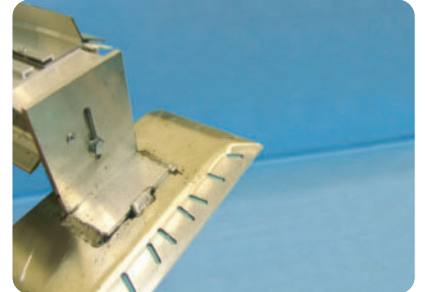

Use code 4 lead and lead sheet sealant on joints from wall to roof.




Use the short wide screws to fix rafters.



## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS



### 7. GLAZING TRANSOMS

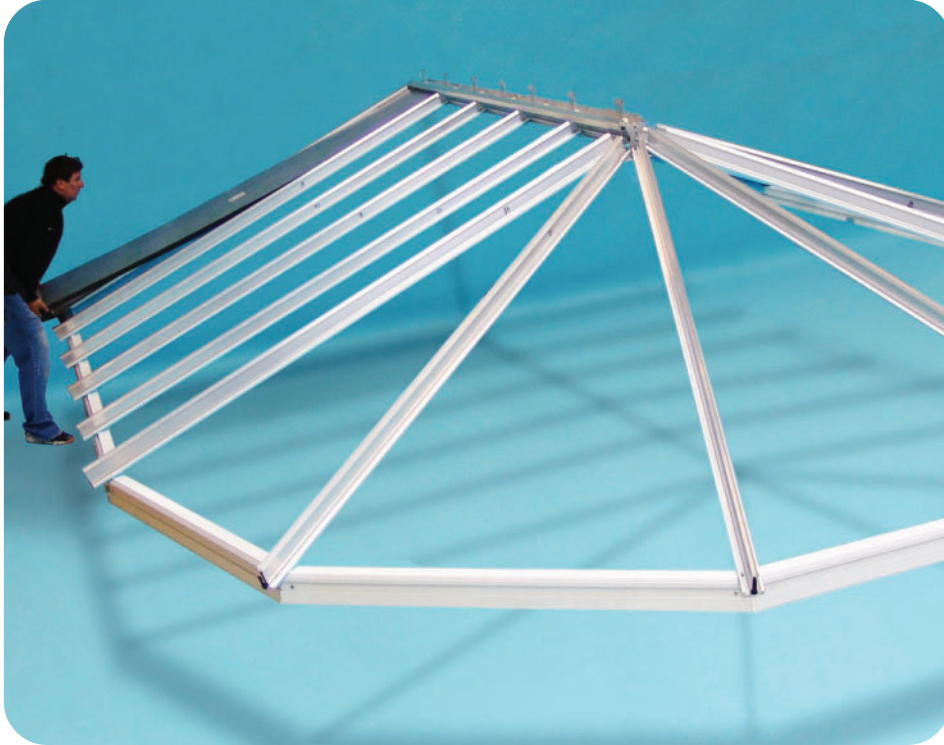

Check that the aluminium foil to the top and sides of each panel are undamaged. Now working anti clockwise, viewed from outside select roof sheet 1, peel back the protective film on each side of the panel so that the roof can be glazed.


Ensure that you read the instructions on the glazing panels prior to commencing glazing, as all glazing panels have an inside and outside face.

Slide the polycarbonate end closure on to the bottom edge of the glazing sheet with the tail pointing downwards.

The end closure also holds the glazing in position.

Push the sheets into the ridge pocket at the top until the leg of the end closure can be clipped into the channel on the ring beam.

### DETAILS

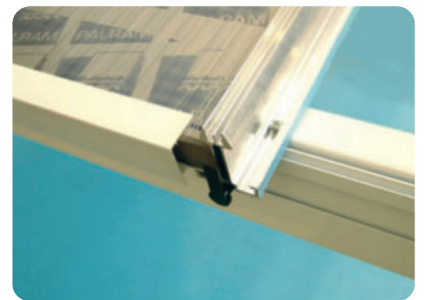





## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS



### 8. GLAZING TRANSOMS




To make glazing the roof easier, the glazing beads are 2 separate glazing beads. This means that one panel can be glazed at a time.

Take glazing bead 1 and press it into place at the top of the transom ensuring that the legs clip in correctly. Gently work down the length of the transom in short movements tapping the bead into position. (A soft-faced mallet should be used for this operation)

Continue fitting the remainder of the panels to each side of the roof.

### DETAILS

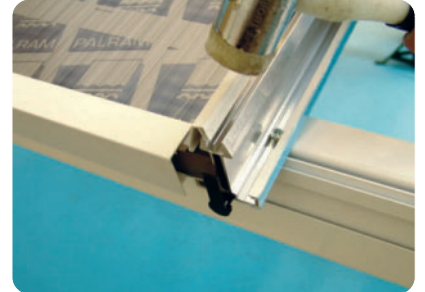


Use a soft faced mallet  
when beading the roof.



## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS





### 9. GLAZING VICTORIAN BARS

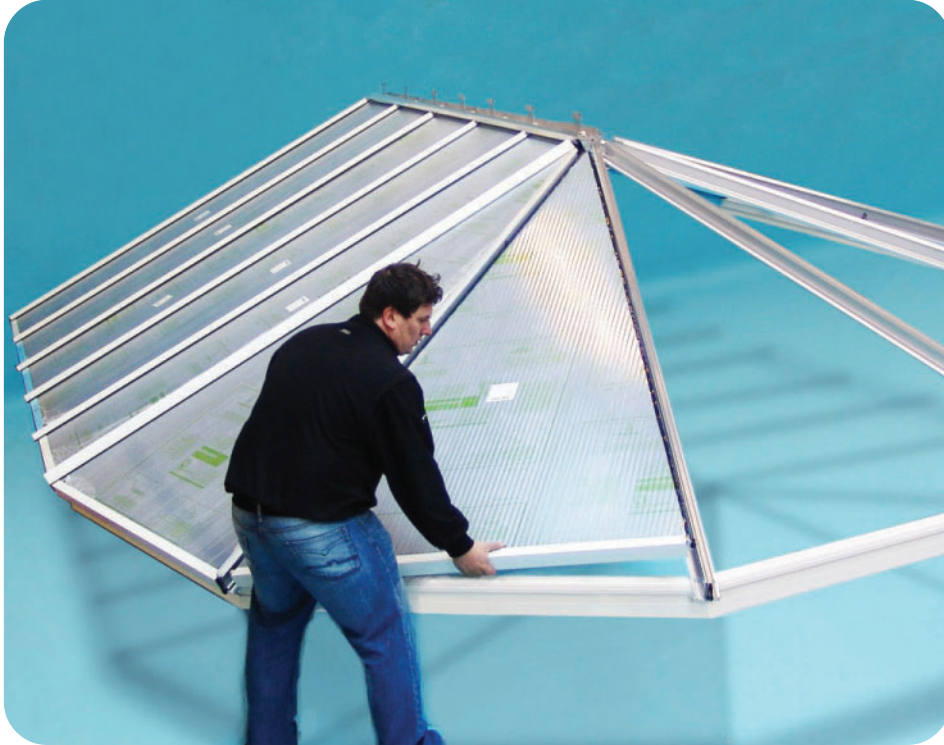


Glaze the front of the roof starting with the left hand side and working anti-clockwise viewed from outside.  
Glaze the Victorian bars in accordance with the previous steps.

### DETAILS

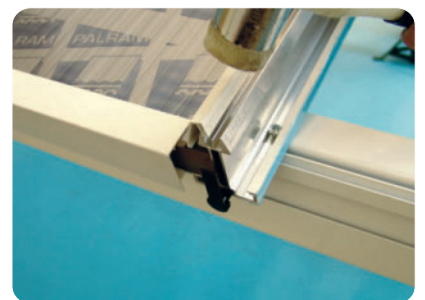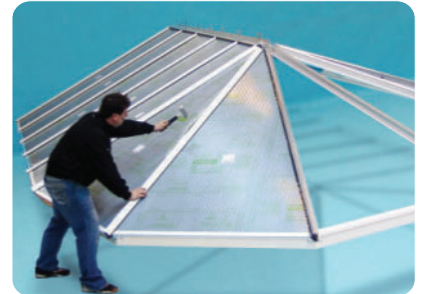


Use a soft faced mallet  
when beading the roof.

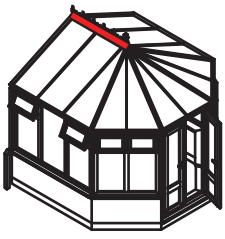

## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS





### 10. RIDGE CAPPING

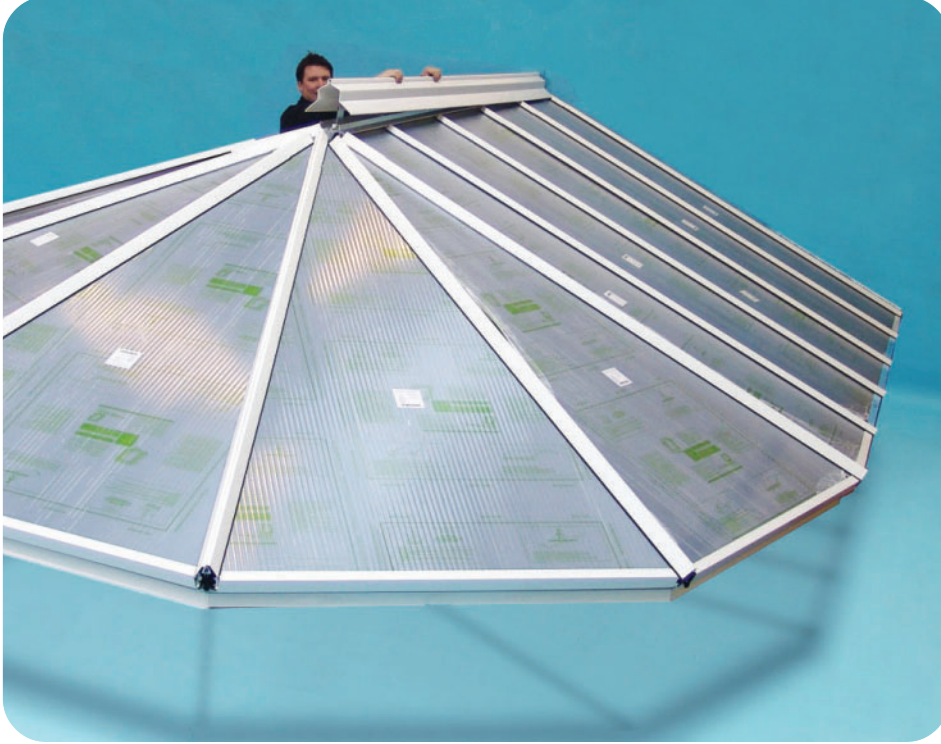

Position ridge capping on the top of the ridge and flashing trim. Now press down on the ridge top cap and work along the length of the ridge until fully clipped down into position.


### DETAILS

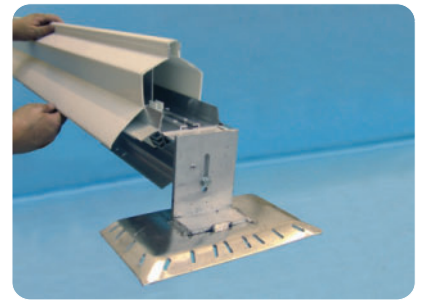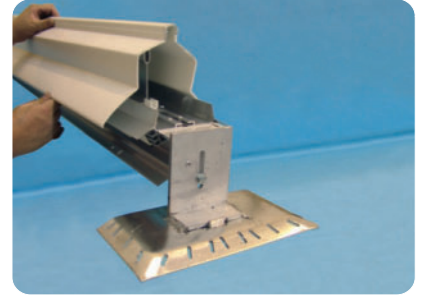

Use low modulus silicone around any joints on the roof.




Use a soft faced mallet when beading the roof.

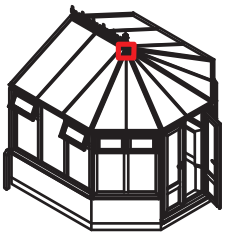

## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS



### 11. BOSS INSULATOR

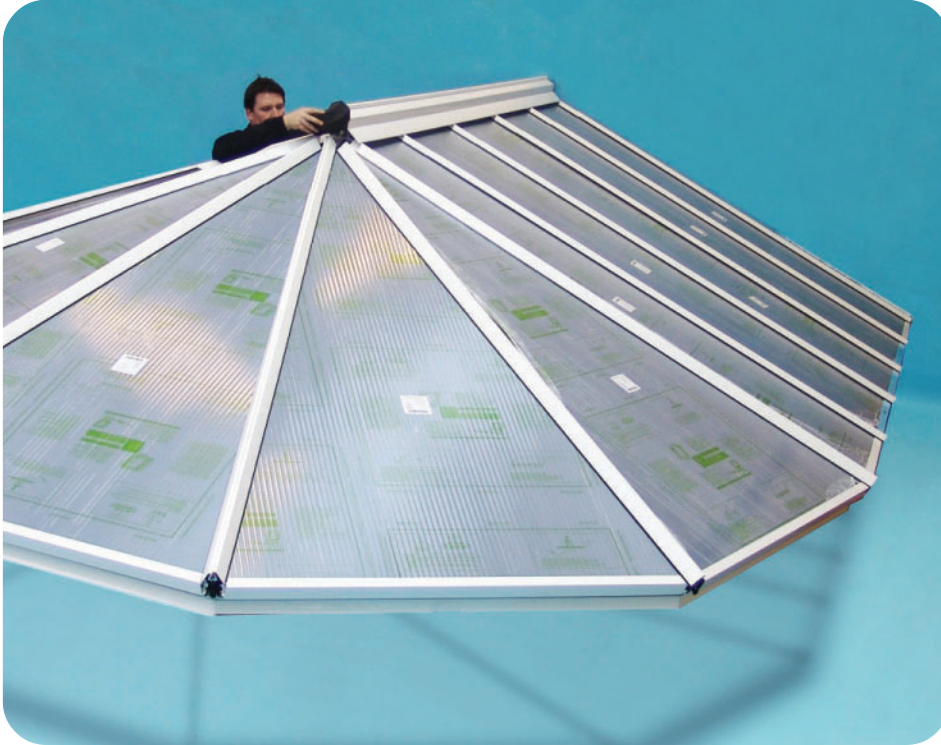


Insert the water repellent insulator into the gap behind the bars, and transoms, then seal around them and the insulator with silicone. Note: The boss insulator may require some onsite trimming to ensure a tight fit to the transoms and victorian bars. This is dependant on the shape, size and pitch of your roof.

If not pre-fitted to the ridge top cap, the boss top cap can now be clipped to the end of the ridge top cap. Firstly silicone the contact area of the two components and then clip into position.

### DETAILS




Use low modulus silicone to seal around any joints

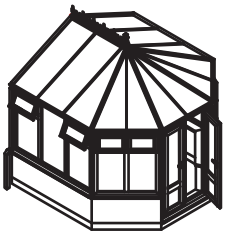

## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS




### 12. CRESTINGS / FINIAL

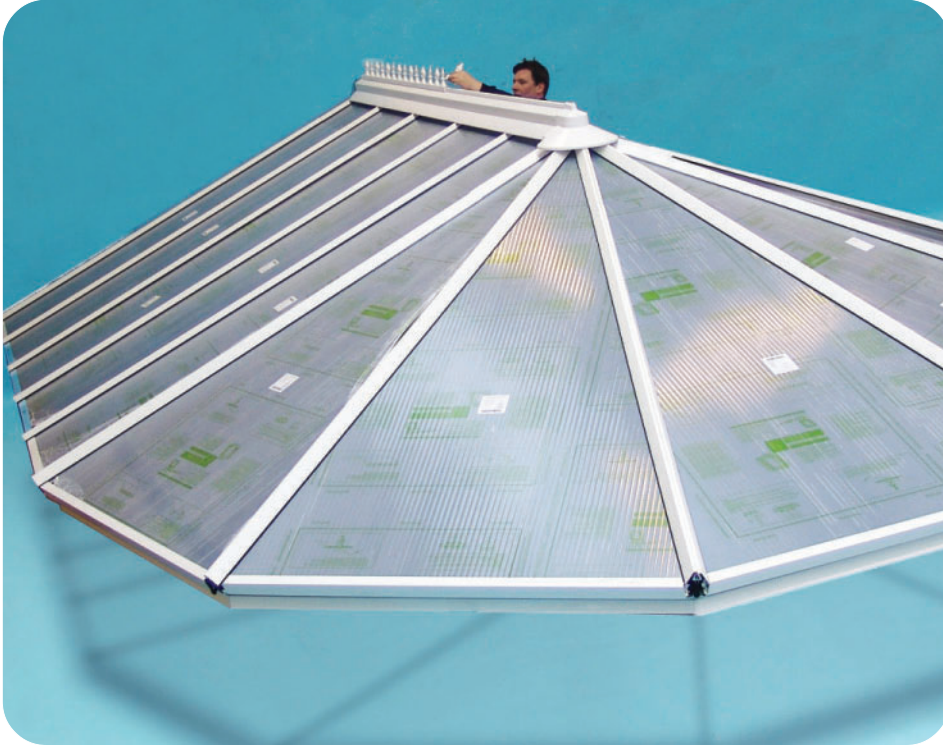


The crestings clip onto the ridge top cap rail. Clip all the crestings onto the full length of the ridge top cap.  
Now the finial can be added. Silicone the contact area and position the finial onto the boss top cap.

### DETAILS

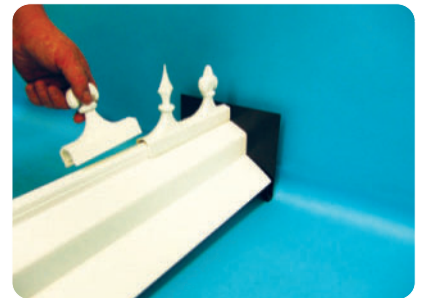


Use low modulus silicone around any joints on the roof.

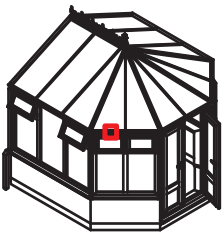

## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS



### 13. GUTTER BRACKETS

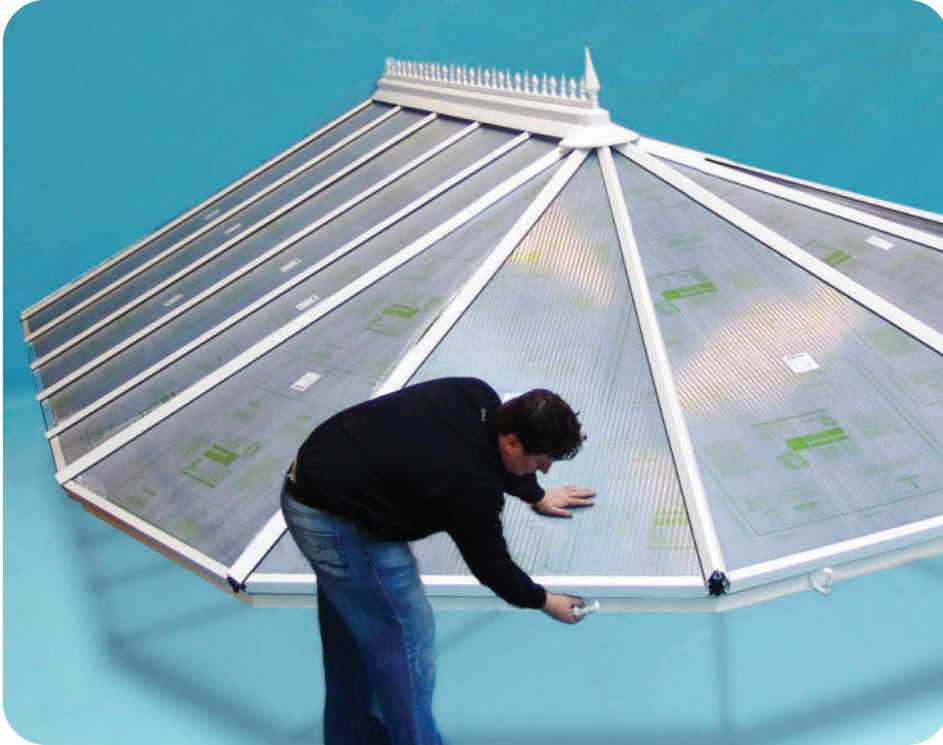


If not pre-fitted please ensure the external ring beam fascia is fitted to the mill finish ring beams.

The gutter brackets should now be fitted at approximately 750mm spacings.

The brackets are fixed into position by rotating through 90 degrees until upright.

On a painted or mill finish ring beam either top hung or bottom hung gutter brackets can be used. Which ever is used, they are fixed to the ring beams using the same method.

### DETAILS

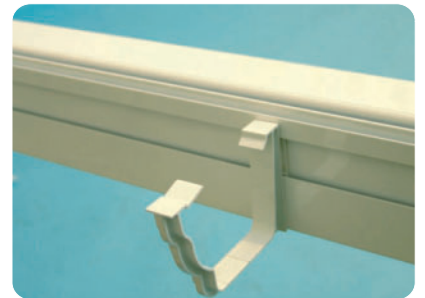




# VICTORIAN ROOF ASSEMBLY INSTRUCTIONS




## 14. GUTTERING

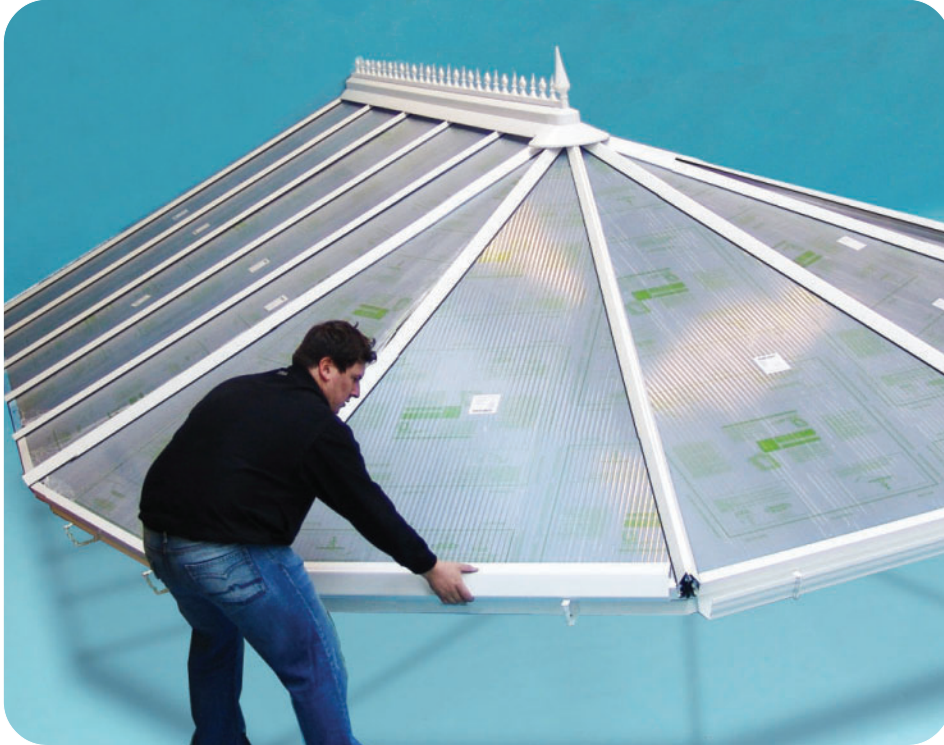


Clip the gutter and outlet into the gutter brackets by placing the front edge of the gutter into the bracket and rolling the back edge of the gutter into the gutter bracket until it passes the clip.

## DETAILS

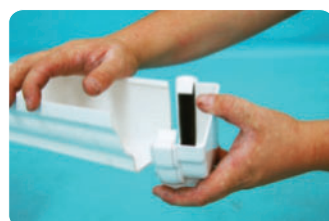

When clipping gutter corners, unions or end caps; firstly unclip then squeeze guttering into joint until fully seated on the gasket. Then reclip into place.

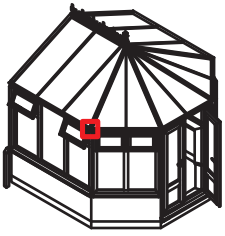

## VICTORIAN ROOF ASSEMBLY INSTRUCTIONS




### 15. END CAPS



If not pre-fitted, push the black plastic brackets into the ends of all transoms and Victorian bars.  
Now the end caps can be clipped onto the small black brackets. These are push fit caps and the use of a hammer is not recommended.

### DETAILS



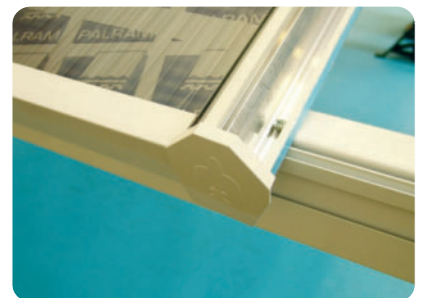










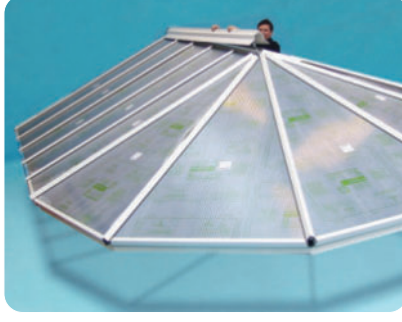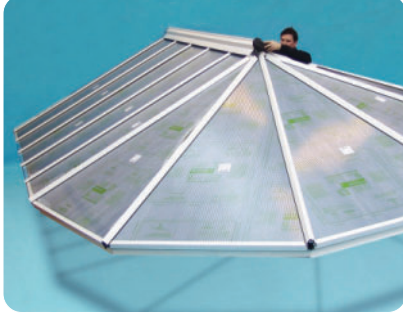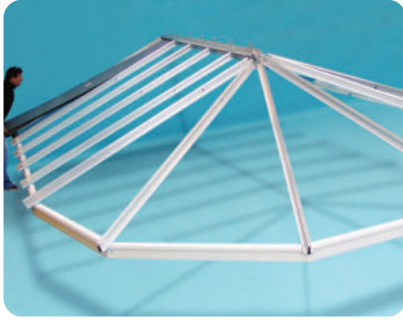

VICTORIAN ASSEMBLY INSTRUCTIONS REV A COPYRIGHT AZTEC ROOFS 2008  
THE COMPANY RESERVES THE RIGHT TO CHANGE DESIGN OF ITS  
PRODUCTS WITHOUT PRIOR NOTICE